
## 6-sensor cabinet interface device


Part of the Expanse system, the Arc is all about convenience–providing power, surge protection, and communications for up to six sensors. Multiple Arc6 units can be placed on a single Ethernet network so that, through the Expanse software, you can see and configure all the sensors in your system right from your computer.

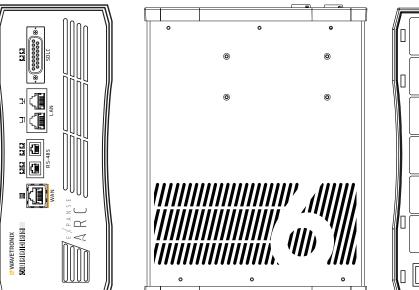

- Puts all connected Expanse or SmartSensor sensors on your Ethernet network, letting you access them from any connected computer via Expanse software
- SDLC port for communicating with compatible controllers
- RS-485 and Ethernet connections for onsite configuration and connection to other cabinet devices
- Accepts AC power, and passes that power on to up to six sensors
- Protects cabinets from surges on the sensor cable

- Arc Surge field-replaceable surge cards let you quickly get the device back in top condition after a surge event
- Can be set on a shelf or mounted on a cabinet wall or 19-inch rack



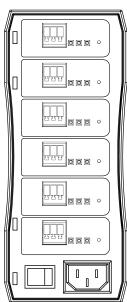

# Arc6 technical specifications

## **Physical properties**

- Weight: 4.9 lbs. (2.2 kg)
- Dimensions: 8.72 in. × 3.42 in. × 10.71 in. (22.14 cm × 8.6 cm × 27.2 cm)
- Included components
  - □ AC power cable
  - Ethernet cable
  - Blank field replaceable surge card cover

## **Operating conditions**

- Ambient operating temperature: -29°F to 165°F (-34°C to 74°C)
- Humidity: up to 95% RH

## Mounting

- Shelf-mount
- Mounting brackets available for purchase
  - □ 19-in. rack mount bracket (2U height)
  - □ Side-mount strut channel bracket
  - □ Top/bottom-mount bracket

## Connections

- Power and surge
  - □ AC input: IEC AC input
  - □ Power switch on back of device turns off power to device
  - □ Arc Surge field-replaceable surge cards protect the device from surges coming in on the sensor cable
- Ethernet
  - 2 RJ-45 10/100 jacks on the front of the device for wired Ethernet communications to other Wavetronix devices, or for onsite configuration
  - 1 RJ-45 10/100 jack on the front of the device for wired Ethernet communications to customer network
- SDLC
  - 1 SDLC port on the front of the device for connecting to SDLC-compatible controllers
- Serial
  - □ 2 RJ-11 jacks on the front of the device for RS-485 communications
- Connections to sensor
  - Six slots on back of device for plugging in field-replaceable surge cards
  - □ Field-replaceable surge cards provide a spot for termination of sensor cables, as well as protecting the device from surges on that cable

## Power

- AC power supply voltage: 100–240 VAC
- AC frequency: 50–60 Hz
- Max AC current: 6 A
- Supports 6 sensors (up to 25 W each)

# **Ordering information**

Arc6 **102-0594** 

## Optional accessories (sold separately)

102-0564 - Arc Surge

**102-0537 –** Arc Surge Expanse Link Spring Cage Connector Kit

- 102-0562 SmartSensor Surge Mark II
- 102-0481 Blank Cover for Arc Surge
- 102-0525 SmartSensor Surge
- 102-0486 Arc 19-inch Rack Bracket
- 102-0485 Arc NEMA Side-mount Bracket
- 102-0487 Arc Diamond Bracket
- 101-0463 Expanse Link S Cable 5000' spool
- 101-0464 Expanse Link S Cable 1000' spool
- 101-0465 Expanse Link S Cable 500' spool

## Contact us

801.734.7200 sales@wavetronix.com www.wavetronix.com

## Configuration

- Illuminated indicators show when data is being transmitted and received on the Ethernet, serial, SDLC and sensor ports
- ±5ppm real-time clock with super capacitor backup
- Supports time sychronization from GPS, NTP or real-time clock

## Surge protection

- AC input surge immunity: IEC/EN 61000-4-5 level 3
- Sensor ports surge immunity: IEC/EN 61000-4-5 level 4; must be obtained by purchasing an FRS card (102-0480)

## Testing

- Tested under FCC CFR 47, part 15, section 15.249
- FCC certification on product label
- FCC regulation-compliant for life of the sensor
- Complies with the applicable standards stated in the NEMA TS2-2016 Standard

- Passes manufacturer's test before shipping
- Equipment labeling found on the bottom of the unit

#### Support

- Extended support options available; contact a Wavetronix representative for more inoformation
- Comprehensive user guide

#### Warranty

■ Five-year warranty against material and workmanship defect